 




SKINNY TWIST HUNG SMART TOILET

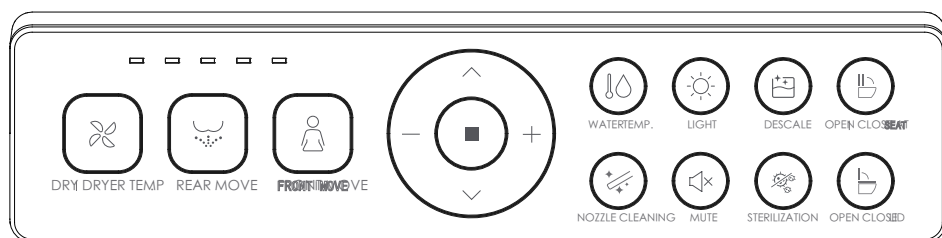

ART. 5421/TW

Remote Control Instructions

Thank you for choosing our product. Please read the instructions carefully before installation and keep it available for future maintenance or reference.

Content

Installation preparation

01. Remote control installation————— 01

02. Battery installation ————— 01

Usage instruction

01. Remote control illustration————— 02

02. Rear/Front washing————— 03

03. Drying/Dryer temperature————— 04

04. Water volume adjustment————— 04

05. Nozzle position adjustment ————— 04

06. Sterilization ————— 04

07. Water temperature adjustment————— 05

08. Seat temperature adjustment————— 05

09. Night light ————— 05

10. Descaling ————— 05

11. Auto lid open/close————— 06

12. Auto deodorization————— 06

 
13. User code————— 06

14. Other operations————— 07

Remote control installation


Remote control holder installation 1 :

1. Drill two 6mm diameter holes in the wall at a distance of about 130.7mm, a depth of about 35mm.
2. Remove the double-sided adhesive tape on the back of the holder.
3. Install an anchor in each of the holes, stick the holder to the wall and secure with screws and then stick the patch with tape.

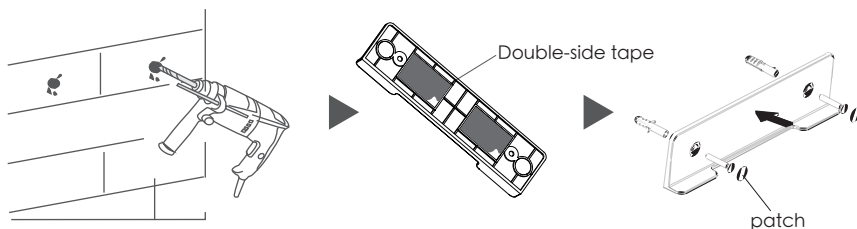


Remote control holder installation 2:

 1. Clean and dry the pre-installation area of the holder.
2. Remove the double-sided adhesive tape on the back of the holder.
3. Stick the holder to the wall horizontally and then stick the patch with tape.

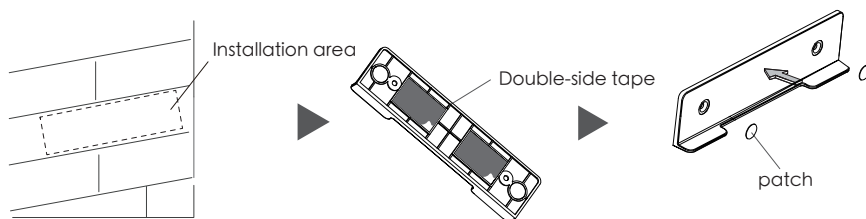

Battery installation:

 
1. Insert batteries into the remote control.
2. Put the remote control to the holder.

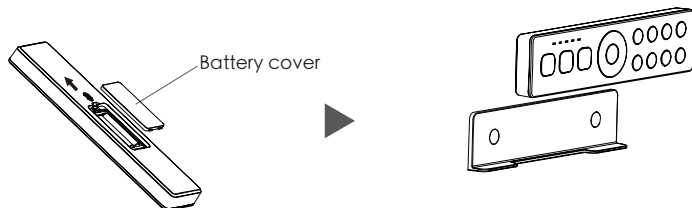

Notice:

1. Please ensure the remote control is within reach when a person on the seat.
2. Do not install and use the product in damp places such as a shower room.
3. Do not place the product in a place where it is easily exposed to water.

 Remote control illustration

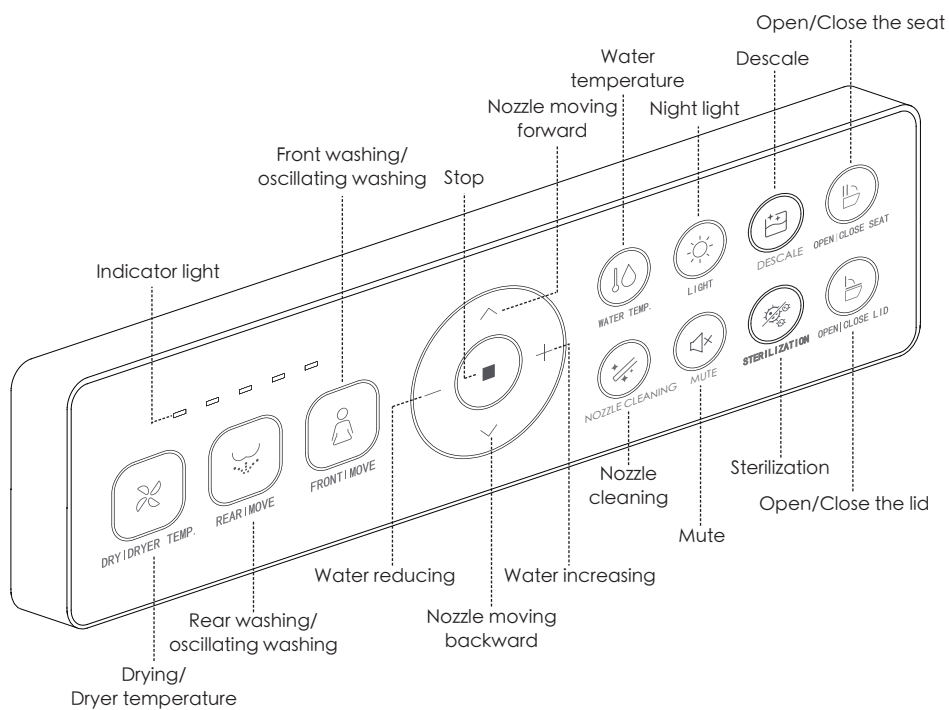

Notice :

- Only when the user is seated and the buzzer beeps can the functions of front/rear washing and drying be activated.
- Please sit backward on the seat for correct washing position and to avoid splashing.
- The nozzle will continue to spray for 1-2 seconds after user stands up during washing, so please press "STOP" button before standing up.

REAR|MOVE



- Press "REAR|MOVE" button, the indicator light is on showing current water temperature level, it starts rear washing; Press again "REAR|MOVE" button to shift to oscillating washing (nozzle moves forward and backward to expand washing area). The washing will stop automatically after one cycle, while it will stop immediately if the user presses "STOP" button.


FRONT|MOVE



- Press "FRONT|MOVE" button, the indicator light is on showing current water temperature level, it starts front washing; Press again "FRONT|MOVE" button to shift to oscillating washing (nozzle moves forward and backward to expand washing area). The washing will stop automatically after one cycle, while it will stop immediately if the user presses "STOP" button.

Pulse cleaning function (Only for the product with pulse cleaning function.)

- During front/rear washing, long press "REAR|MOVE" or "FRONT|MOVE" button to turn on/off pulse cleaning mode.

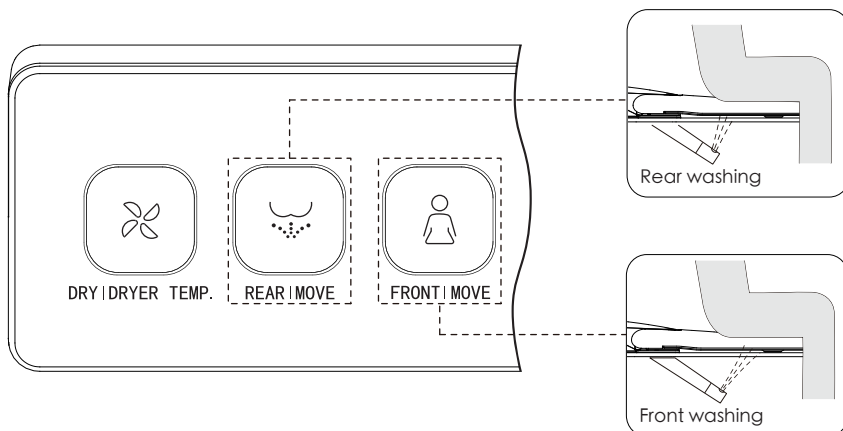 


DRY | DRYER TEMP



DRY | DRYER TEMP.

① Press "☘" button, the indicator is on, showing the current air temperature level. It will stop drying automatically after one cycle or after leaving.

 ② Under drying, press "☘" button to adjust the air temperature between 0-5 level, and the indicator light is on showing the air temperature level. When the indicator light is off, the temperature is at level 0 (room temperature).

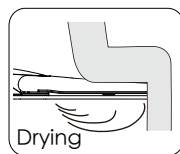

○ ○ ○ ○ ○

Room
temperature

● ○ ○ ○ ○

Level 1

● ● ○ ○ ○

Level 2

● ● ● ○ ○

Level 3

● ● ● ● ○

Level 4

● ● ● ● ●


Level 5

Water volume adjustment

- Press "+" or "-" button when it is under function of rear washing or front washing, the indicator light is on showing current water volume level, and water volume can be adjusted.

Nozzle position adjustment

 - Press "Λ" or "V" button when it is under function of rear washing or front washing, the indicator light is on showing current nozzle position, and nozzle position can be adjusted in 5 levels.

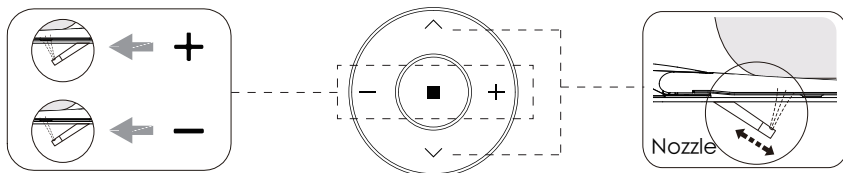

Sterilization



STERILIZATION

When no one seated and washing/drying is off, press "⚙️" button to turn on plasma sterilization function. This function will stop automatically after 2 hours. Under this mode, if any other button is pressed or user is seated, it will stop automatically. (Only for the toilet with sterilization function.)

Water temperature adjustment



WATER TEMP.

Short press "  " button to adjust the water temperature between 0-5 level. The indicator light is on showing current water temperature level. When the indicator is off, the temperature is at level 0 (room temperature).

○ ○ ○ ○ ○

Room
temperature

● ○ ○ ○ ○

Level 1

● ● ○ ○ ○

Level 2

● ● ● ○ ○

Level 3

● ● ● ● ○

Level 4

● ● ● ● ●

Level 5

Nozzle cleaning



NOZZLE CLEANING

When no one is seated, short press "  " button, the nozzle will automatically stretch out to allow access for cleaning. Press "  " button to return the spray wand to its normal position.

Night light



LIGHT

- Night light adjustment: Short press "  " button to turn on/turn off night light.
- Intelligent mode: Long press "  " button to enter into intelligent mode (Night light will be on or off depending on the surrounding light.). If the product is on intelligent mode, short press "  " button to exit intelligent mode. (Factory setting: intelligent mode)

Descaling



DESCALE

When no one is seated, press "  " button to drain the water tank. Empty the water tank and pour in 125mL descaling agent. Press "  " again to start descaling function and it will stop automatically after 12 minutes. Do not cut off water and electricity during descaling. (Only for the toilet with descaling function)

Auto lid open/close



OPEN|CLOSE SEAT

Short press "  button, open or close the lid.

Short press "  button, open or close the seat.



OPEN|CLOSE LID

Long press "  button to turn on/off auto lid open/close function.

Quiet mode



NOISE

Short press "  " button to turn on/off quiet mode.

User code

· Radio frequency remote control

- ① Shut off the power supply of toilet
- ② Press and hold "  button, then press "  button, the indicator light will flash.
- ③ Re-connect the power plug and press "reset" button.
- ④ The indicator stops flashing and stays on for 2 seconds, indicating that the remote control and the toilet are matched successfully. It beeps once when the self-inspection completes. Then the remote control is ready for use.

Other operations

Foot sensor function

- Long press "  " button to turn on/off foot sensor function. Foot sensor is deactivated when the user is seated. (Only for the toilet with foot sensor function.)

Foot sensor indicator

 
- Press and hold "  " button, and press "  " button to turn on/off foot sensor indicator. (Only for the toilet with foot sensor indicator.)

Electronic bidet tank flushing

- Press and hold "  " and "  " button simultaneously for longer than 3 seconds to start the flushing by water tank of electronic bidet. (Only for the toilet with electronic bidet tank flushing function.)

Remark:

- The buzzer will "BEEP" once when the user presses one button indicating that the main unit receives the signal and conduct the operation accordingly. If the buzzer doesn't sound, it means the main unit doesn't receive the signal, please adjust the remote control direction and repress the button.
- In case of power cut during nozzle spraying, the wand cannot be retracted, please wait until the power is restored. In case of a power cut for a long period, please push the wand softly back by hand. Do not push hard, to avoid damage to wand and electrical machine.

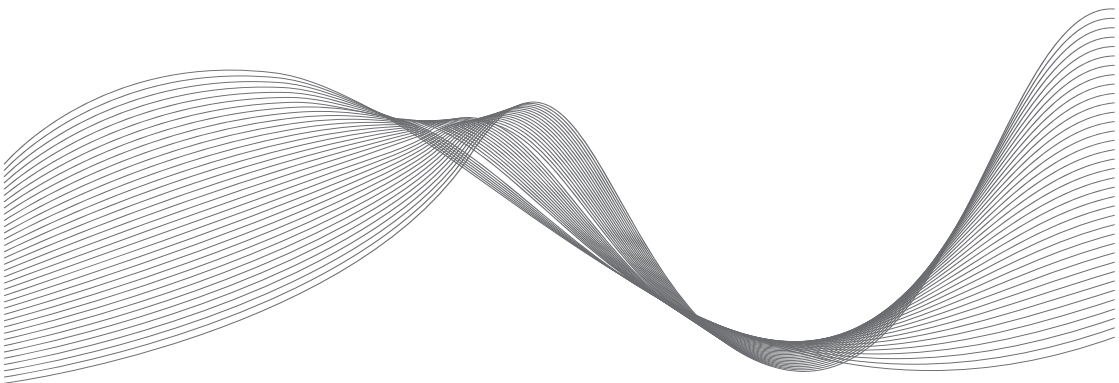

The picture of product may not entirely consistent with actual appearance and color because of product improvements, please in kind prevail.